

LFM LED G2

Lightweight, highly flexible LED magnifier



Designed for cosmetology, salons & spas.

LUXO

LFM LED G2

LFM LED G2 is Luxo's most cost effective magnifier with an all-metal construction, LED light sources, and a flexible spring-balanced arm in the Luxo tradition. The arm provides long reach and maximum vertical and horizontal movement, and will always stay in the right position without drifting. Along with its light weight, the flexibility of the joint between lamp head and arm, make exact positioning almost effortless.

Shadow-free Magnification

The 5" diameter glass lens is positioned in the middle of a circle of LED light sources. This is the ideal way of illuminating an object, virtually eliminating shadows.


Choose from a 3-diopter lens (LFG028210) or a 5-diopter lens (LFG028211), both with edge clamp. For additional magnification, a secondary STAYS lens of 4-, 6-, or 10-diopters can be attached to the glass lens.

Color: White, with black details.



| | |
|-----------------------|---|
| Light Source | 1750 lux at focal length 13" Total energy consumption: 9W Color rendering index (CRI): >80 Timer and dimming: 9/4 shut off; 100-50-0% step dimming |
| Body Material | Steel arm with aluminum head Shade neck cover in rubber Color: white with black accents |
| Mounting | Standard with edge clamp mount |
| Optics | Standard with 3-diopter (1.75X) or 5-diopter (2.25X), optical-quality glass lens Lens diameter is 5" Secondary lenses: optional 4-, 6- or 10-diopter STAYS lens can be attached to the magnifier lens |
| Arm Technology | Heavy-duty internal-spring 45" parallel, three-pivot K-arm with .5" steel tubing |

| Part # | Old Part # | Description |
|-----------|------------|----------------------------|
| LFG028210 | 18345WT | LFM LED G2, 3-diopter, 45" |
| LFG028211 | 18346WT | LFM LED G2, 5-diopter, 45" |

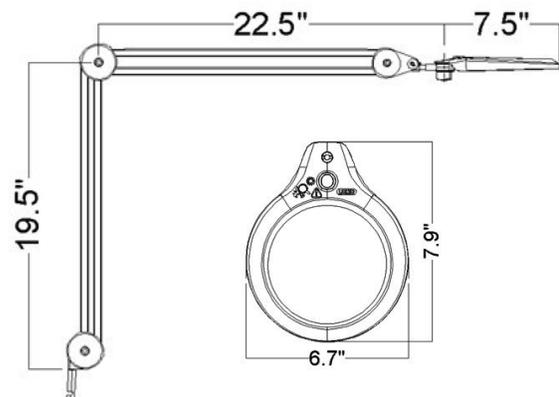

~ 5 YEAR WARRANTY ~